



# Root Wads Step-by-Step


①

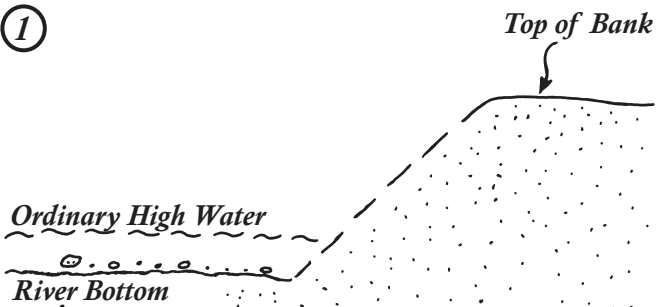


② Construct during periods of dry riverbed or isolate area.

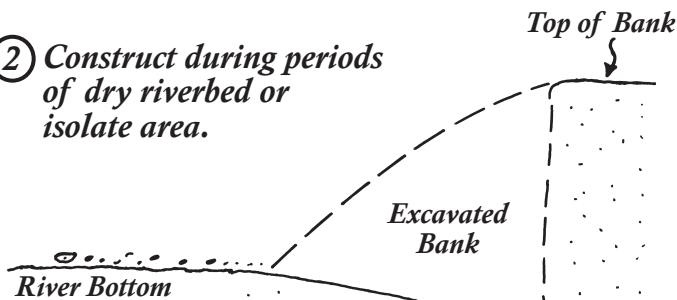


③ Entrench footer log into riverbed.

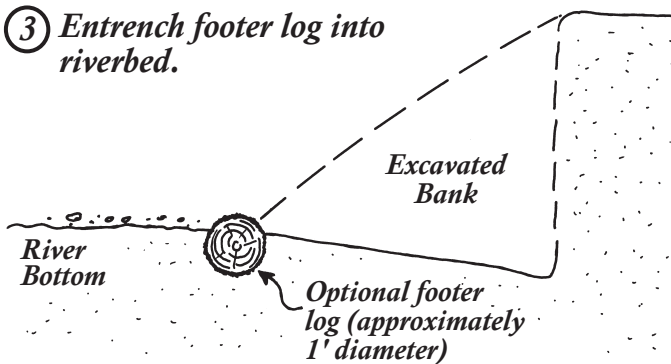


④ Place root wad; drill through root wad trunk and footer log and pin in place to footer log with rebar.

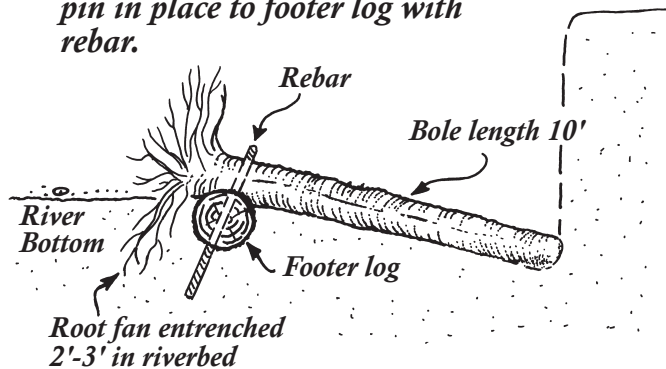


⑤ Pin root wad trunks to header and footer log with rebar.

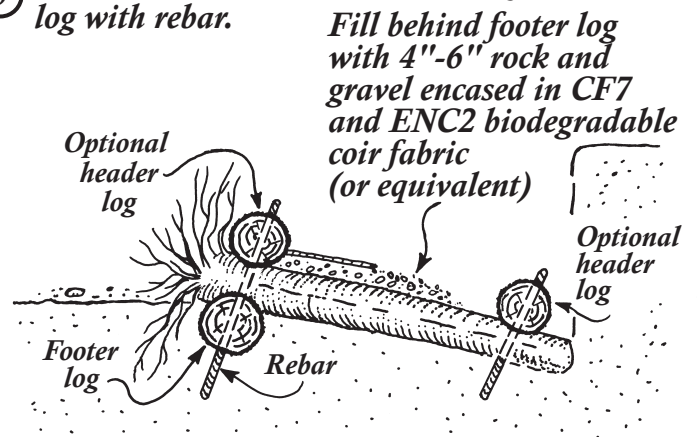

TopView

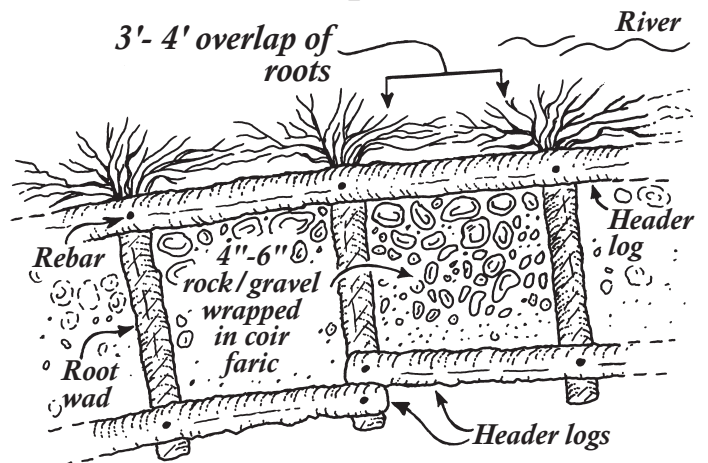

⑥ Install dormant cuttings 15 stems per linear foot over wrapped soil. Deposit layer of top soil over cuttings. Water liberally and compress soil.

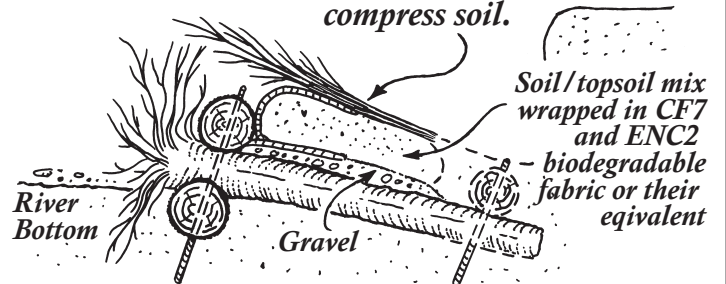

⑦ Repeat step 6 until desired height of bank is reached.

